 




Digital door lock  
Model ER4900

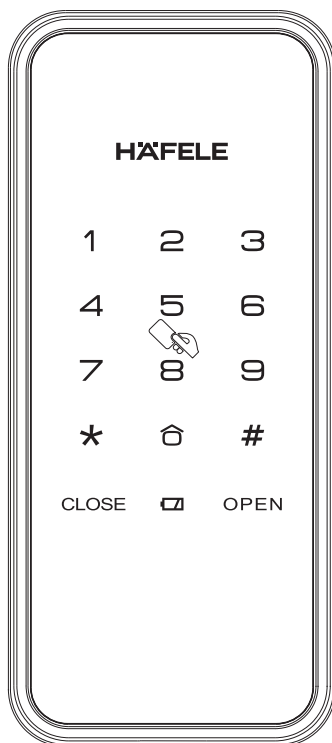

ER4900

## User Manual

# Contents

---

## Read before using

Product features .....	2
Warnings.....	3
Product specifications .....	3
Factory default settings.....	4
Quick setup guide .....	4

## Lock operation

How to change master PIN code.....	5
How to add user PIN code.....	5
How to add key card.....	5
How to delete user PIN code.....	5
How to delete key card.....	6
Locking mode.....	6
Language and silent mode setting.....	6
Privacy mode.....	7
Menu table.....	7

## How to use

How to open the door from outside .....	8
Random security coding function.....	8
How to open the door from inside.....	8
How to lock the door.....	8
Micro USB emergency power supply.....	9
Reset to factory default setting.....	9

Read before using

✓ Product features



Two way solution

Two electronic locking modes: master PIN code/user PIN code, key card.



Master PIN code/ User PIN code/ Key card identification

1 master PIN code, up to 20 user PIN codes, 50 key cards.



Random security coding function

The random number can be added before or after the real user PIN code but the maximum length is 20 digits. This feature will prevent the real user PIN code from being exposed.



Auto lock / Auto re-lock function

When the door is closed, the lock will lock automatically (In case of auto locking mode).



Privacy function (Double lock function)

When the double lock function is activated the door cannot be opened from outside with user PIN code, key card or fingerprint except with master PIN code.



Prevent mischief and hacking

When entering 10 times a wrong user PIN code and card , the lock is suspended 3 mins. After that the lock will activate again. While the lock is suspended, the screen will flash when you are trying to use keypad.



Alarm for battery replacement time

 
When the power of battery is too low a warning signal will appear on the screen. Please replace all batteries immediately.

## Read before using

### Warnings

- \* Read and understand all instructions before use.
- \* If damage is caused by failure to follow this instructions, the warranty does not apply.
- \* Only use the alkaline batteries.
- \* Do not expose the product and accessories to rain or water.
- \* Do not expose the product to corrosive substances to avoid damage to the protective cover.
- \* When cleaning the product, please wipe with a soft cloth.
- \* If there is a low battery alert, please replace all the batteries in time and make sure they are properly installed.

### Product specifications

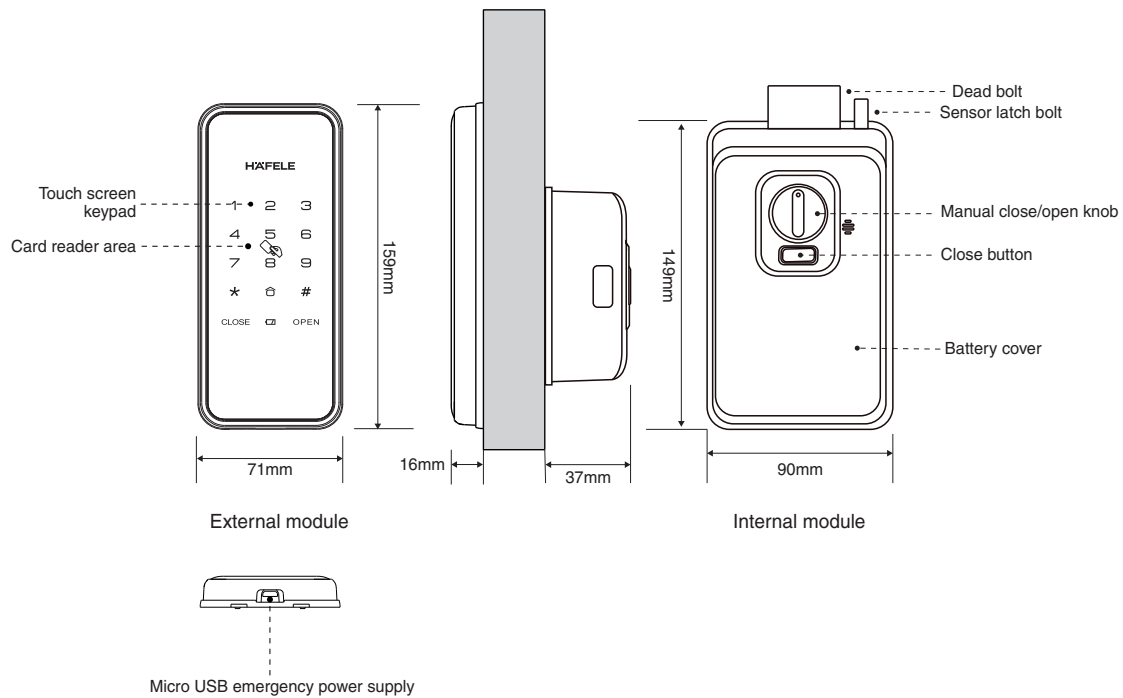

### CAUTION

1. You can follow the voice guide by multi-language (English/Spanish/Portuguese/French/Chinese).
2. Master PIN code(4~10 digits): Default master PIN code is "12345678", please modify it after installation.
3. User PIN code(4~10 digits): Maximum capacity is 20 with user number [00-19].
4. Card: Maximum capacity is 50 with user number [00-49].

Read before using

## ✓ Factory default settings

Settings	Factory defaults
Master PIN code*	12345678
Auto locking	Enabled
Speaker	Enabled
Wrong code entry limit	10 times
Shutdown time	3 minutes
Voice guide language	English

\*Important: First step is to set your own master PIN code.

## ✓ Quick setup guide

**MP**

Master PIN code

**UP**

User PIN code

**00~  
19**

Input number (00~19)

**00~  
49**

Input number (00~49)

**\***

Star key, return to previous menu

**Card**

Enter card

 


Touch the screen to activate lock

## Lock operation

### ✓ Add/Change access data


#### How to change master PIN code



#### ⚠ CAUTION

Before changing default master PIN code, all other setting menu will be disabled. You have to change master PIN code first, then do other lock settings.

 
#### How to add user PIN codes



#### ⚠ CAUTION

1. When registering user PIN codes, the code must be entered within 10 seconds.
2. At any time you can return to the previous menu by pressing the “\*” key.
 
#### How to add key cards



#### ⚠ CAUTION

1. When registering user card, the card must be entered within 10 seconds.
2. At any time you can return to the previous menu by pressing the “\*” key.

### ✓ Delete access data

#### How to delete user PIN code



 
 
#### ⚠ CAUTION

1. When deleting user PIN codes, the user number must be entered within 10 seconds.
2. At any time you can return to the previous menu by pressing the “\*” key.
3. Deleting all user PIN codes can only be done by resetting the lock to factory default settings.

## Lock operation

### ✓ Delete access data

How to delete key card



#### ⚠ CAUTION

1. When deleting user card, the card must be entered within 10 seconds.
2. At any time you can return to the previous menu by pressing the “\*” key.
3. Deleting all user card can only be done by resetting the lock to factory default settings.

### ✓ Additional lock features

Locking mode

Auto mode



Manual mode



Language & Silent mode settings



**1** English

**2** Spanish

**3** Portuguese

**4** French

 
**5** Chinese

**6** Silent Mode

## Lock operation


### ✓ Additional lock features

#### Privacy mode

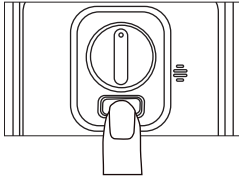

When the door is closed, long press close button for 3 seconds to enable privacy mode. In privacy mode, all user PIN code / card will be prohibited, except master PIN code.

### ✓ Menu table

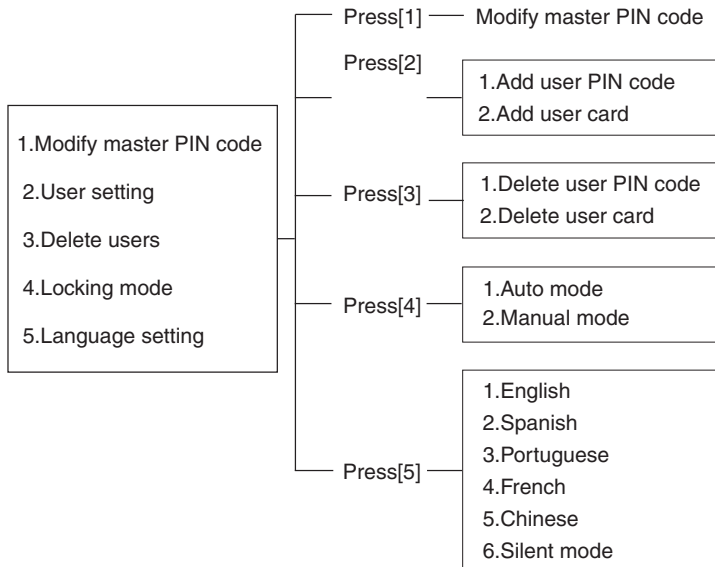 



✓ Open & Lock the door

How to open the door from outside



PIN code

1. Touch keypad screen by palm to wake up lock.
2. Enter the enrolled PIN code and press [#].



 
Card

Place the enrolled card properly on the card icon area until one beep sounds.

Random security coding function

The random number can be added before or after the real user PIN code but the maximum length is 20 digits. This feature will prevent the real user PIN code from being exposed.

How to open the door from inside

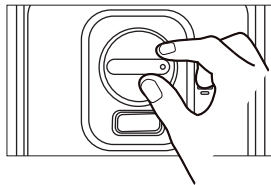


Manual close/open knob

Turning manual close/open knob into the position of unlock icon.


How to lock the door

Auto locking mode: After close the door, the deadbolt will come out automatically

 
Manual locking mode:

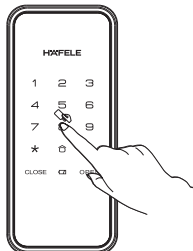

Press and hold any key for 1 second.

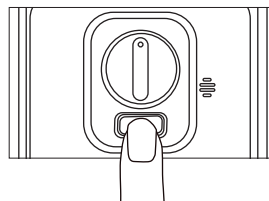 

Press close button 1 time to lock.

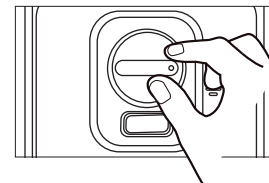 


Turning manual close/open knob into the position of lock icon.

✓ Service features

Micro USB emergency power supply



 
Micro USB emergency power supply

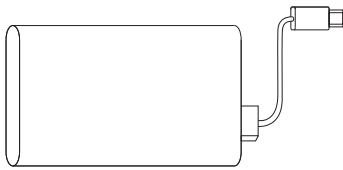

Power bank (Micro USB)

When the battery voltage is too low and cannot be opened from outside, connect a 5V power supply via Micro USB port at the front. Then unlock the door and replace all batteries immediately.

 Reset to factory default settings

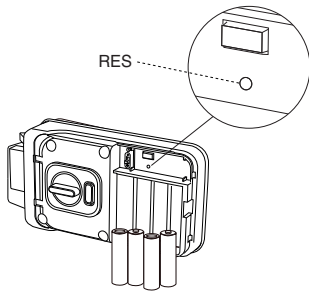

**⚠ CAUTION** All user data will be deleted!

Operation instructions:

1. Keep the lock in "unlock" status.
2. Open battery cover and find the reset button.
3. Use a paper clip to press and hold the reset button.
4. Remove at least 1 pcs battery from battery box, then reinstall all batteries again.
5. Keep holding the reset button until hearing voice guide.